



9619

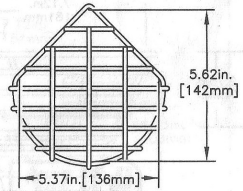


TOP VIEW

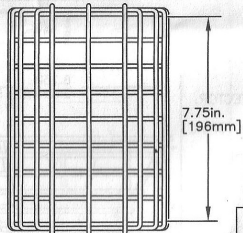


FRONT VIEW


9619

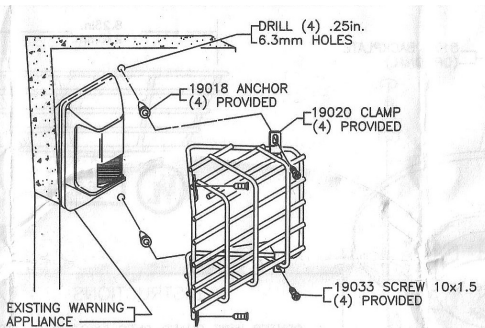

9618

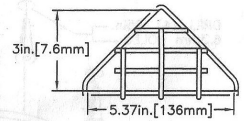

TOP VIEW

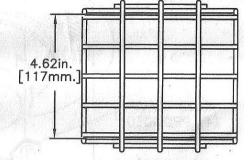

FRONT VIEW

9618

NOTE

IF AFTER INSTALLATION, INTERFERENCE OF THE PROJECTED BEAM PASSING TO CLOSE TO ONE OF THE WIRE STRUTS IS NOTICED, THE INTERFERING STRUT MAY BE CUT AND REMOVED WITHOUT STRUCTURAL WEAKENING OR LOSS OF WARRANTY.

INSTRUCTIONS
 PLACE WIRE GUARD OVER EXISTING APPLIANCE. INSERT 1 CLAMP BETWEEN WIRE GRID. MARK AND DRILL 1 HOLE. INSERT ANCHOR AND FASTEN SECURELY. NEXT MARK AND DRILL THE REMAINING 3 HOLES. COMPLETE INSTALLATION AS SHOWN.

TYPICAL INSTALLATION OF STI #9618, #9619 CORNER P.I.R. WIRE GUARD